

Dear customer,

**The xx-320FR-xxx\_FW\_v5.1.1.0\_51655\_RD20231023  
FW version update requires three steps in the below order :**

- 1) FW update (tar file) via IP manager / browser.
- 2) Kernel update (bin file) via IP manager / browser.
- 3) implementing factory config tool & file.

Provision-ISR Technical Team

## **1) ABSOLUTE MOVE**

Camera control command that positions a PTZ camera to specific coordinates or angles with absolute precision, allowing for accurate and predetermined camera positioning. This command ensures that the camera moves directly to the specified location rather than making relative adjustments.

## **2) BUG FIXES.**

Provision-ISR Technical Team